



INSTALLATION MANUAL

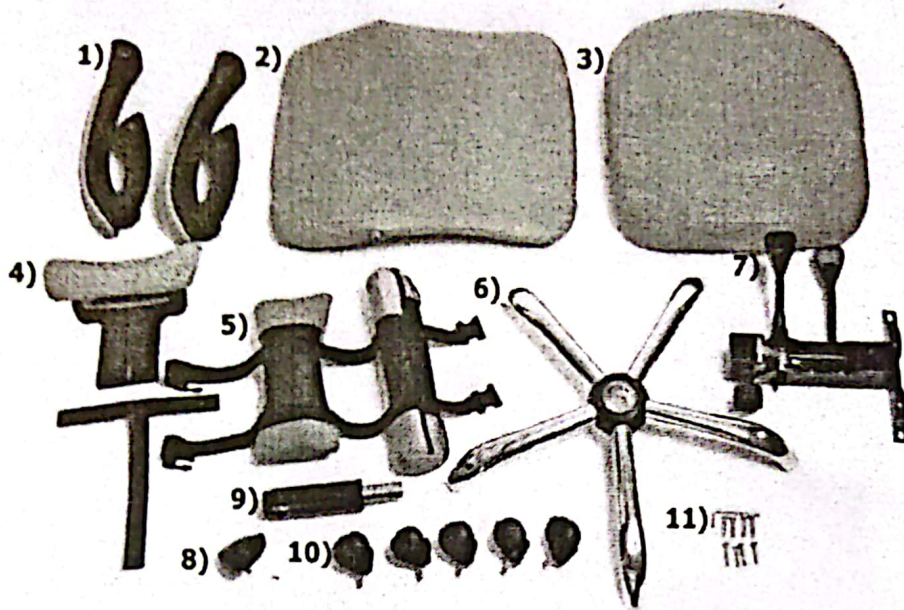


COMPARTMENT


- 1. ARMREST X 1 PAIR
- 2. BACKREST X 1
- 3. SEAT X 1
- 4. HEADREST X 1
- 5. NECK & LUMBAR PILLOW
- 6. BASE X 1
- 7. SEAT TILT ADJUSTER X 1
- 8. TRIANGLE NUT X 1
- 9. PUMP
- 10. CASTER X 5
- 11. SHORT SCREW X 4
THIN LONG SCREW X 3
THICK LONG SCREW

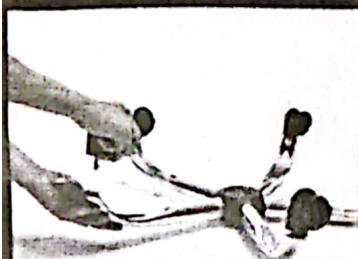

1. Insert the caster into the base

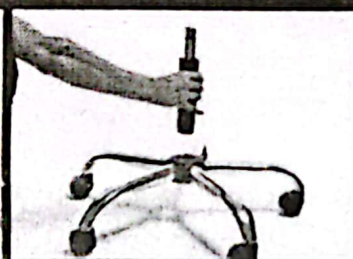


2. Insert the pump into the base

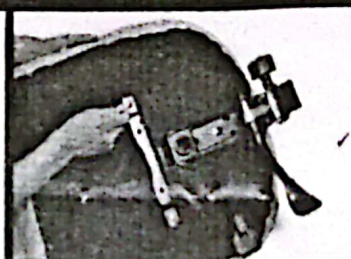

3. Use 4 pieces of short screw to screw the seat tilt adjuster at the seat



4. Align the hole of the seat tilt adjuster with the top part of the pump

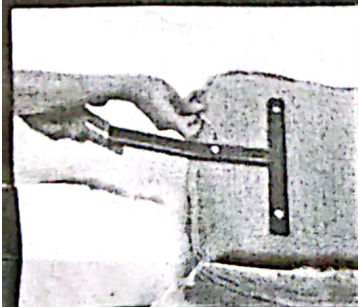


5. Install the T-bar on the backrest using 3 thin screw



6. Insert the T-bar into the seat tilt adjuster




7. Twist the black screw at the seat tilt adjuster to thighten the backrest and the seat

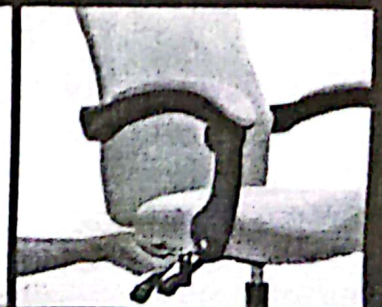


8. Use 4 pieces of thick screw to install the armrest to the backrest and seat



9. Insert the headrest directly to the backrest

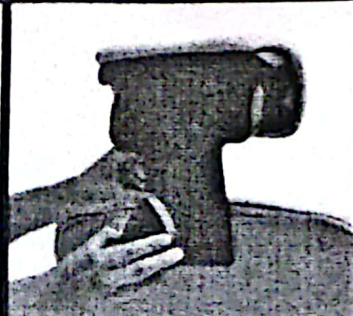

10. Use the triangle nut to tighten the headrest to the backrest

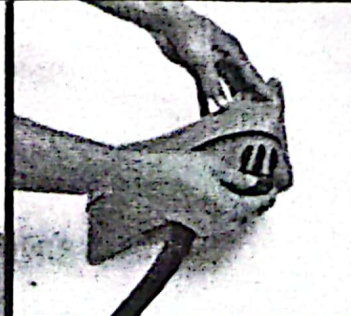

11. Put the strap into the neck pillow



12. Attach the neck and lumbar pillow to the backrest and buckel up