ASSEMBLY INSTRUCTION SR558

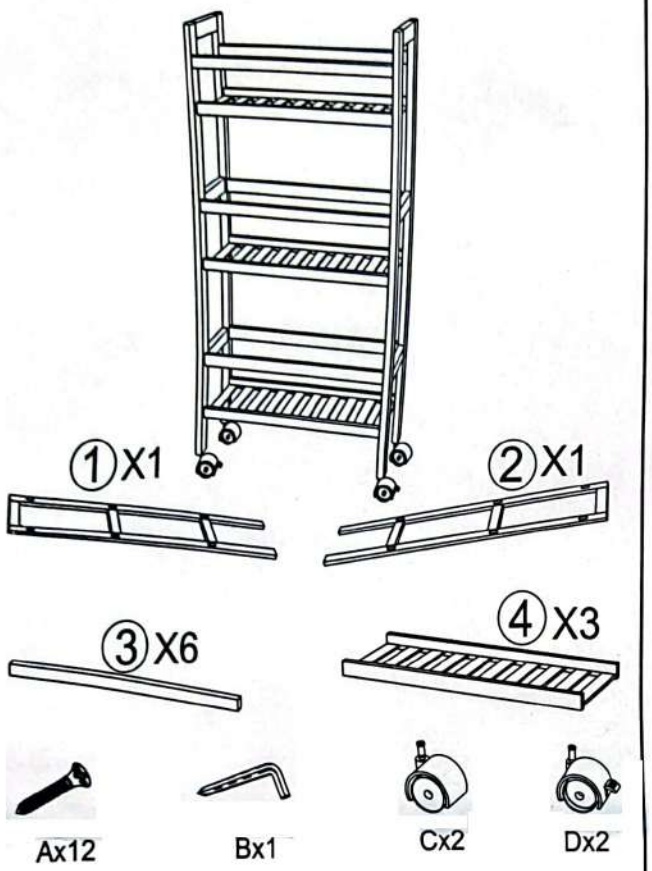

STEP1

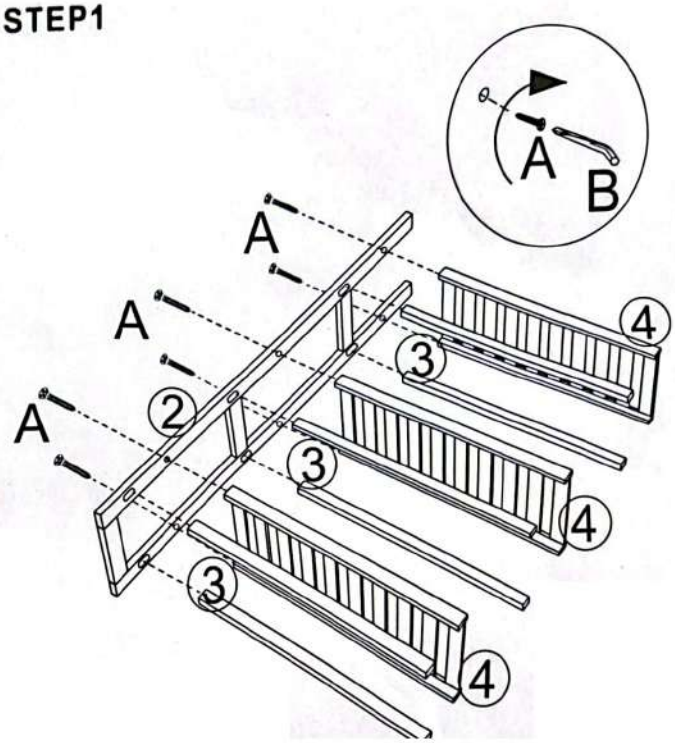
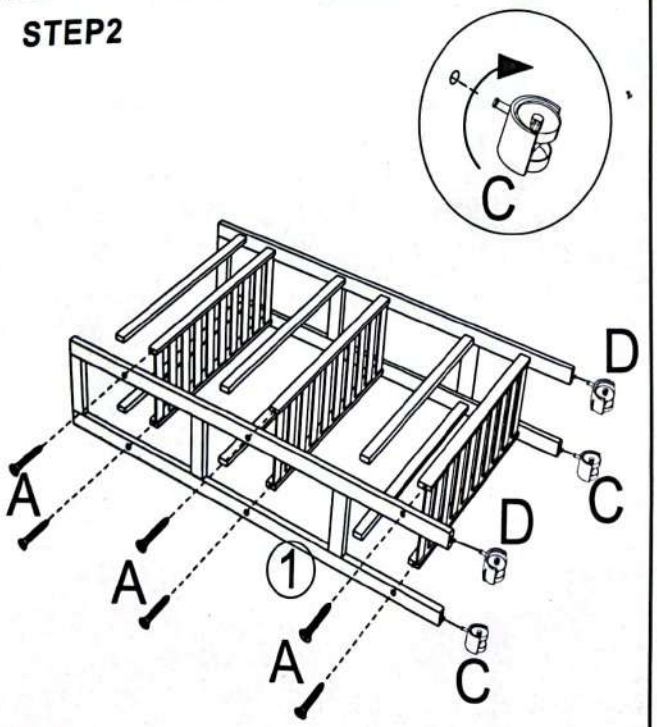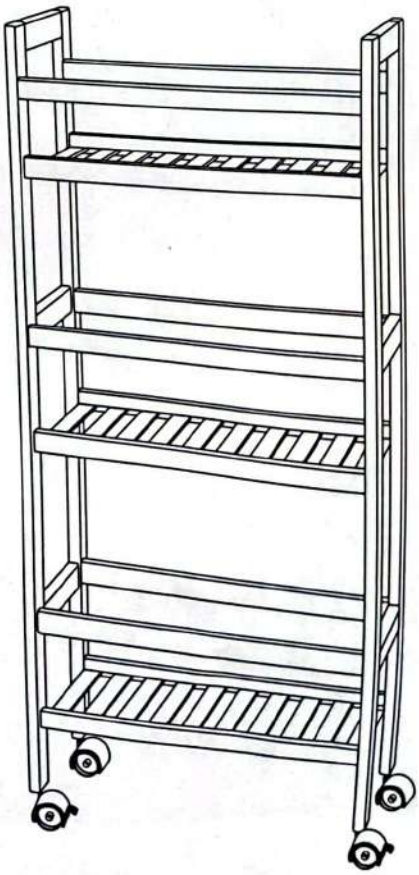
STEP2