

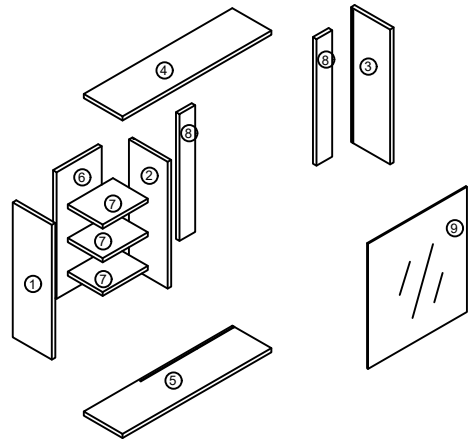


Assembly Instruction

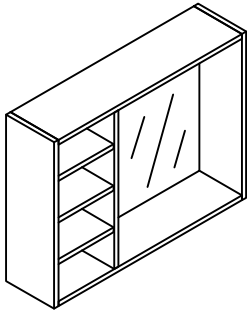

A



X28

B



X28

C



X4

D



X4

E




X1

F



X4

Step1

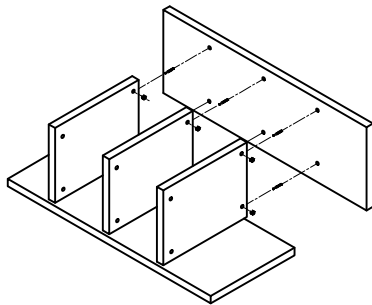


A



B



Step2

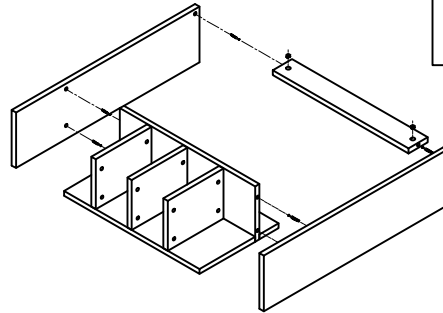


A



B



Step3

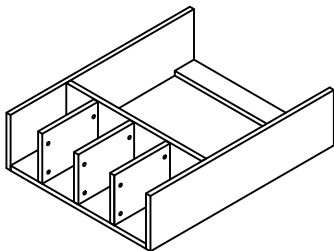


A



B




Step4

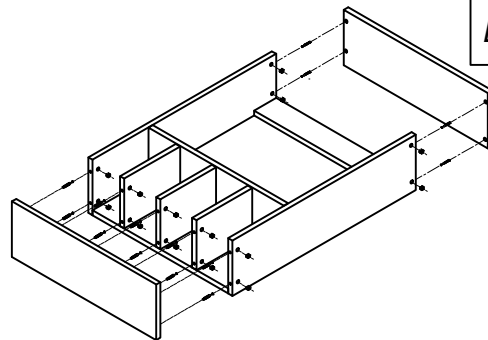

F



Step5

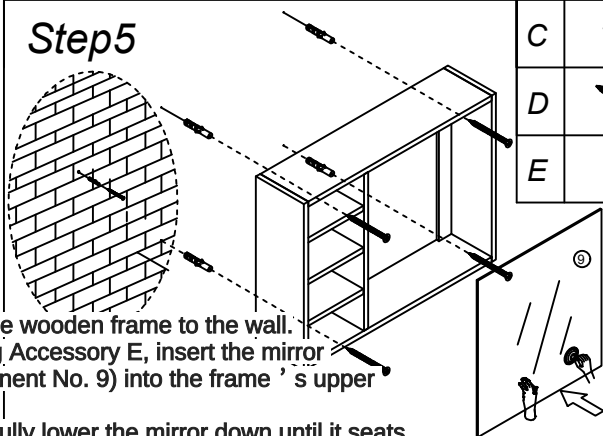

C




D



E



Step6

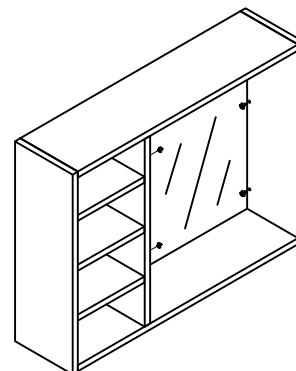

F



Step 5:
a) Fix the wooden frame to the wall.
b) Using Accessory E, insert the mirror (Component No. 9) into the frame's upper groove.
c) Carefully lower the mirror down until it seats fully into the lower groove.

Caution: Take care while handling the mirror to avoid sharp edges.